


WATERPROOF THERMOMETER – LONG STEM

-40 to +450°F/-40 to +230°C

FOR CANDY, DEEP FRY AND GENERAL PURPOSE COOKING

- NSF[®] Certified
- 6 second response
- 2.5 mm reduced tip
- 8"/20.3 cm stem
- Field calibration
- Waterproof (IPX7)
- Safe for commercial dishwashers
- Shatterproof
- High heat
- Hold
- Max/min mode
- Big digit
- Food-safe ABS plastic with BioCote[®]
- Stainless steel stem
- Heat shield
- Adjustable stainless steel clip
- On/off button
- Auto-off after 15 minutes
- Temperature guide on sheath
- 2-way mounting: pocket clip/loop
- One LR44 alkaline button battery included

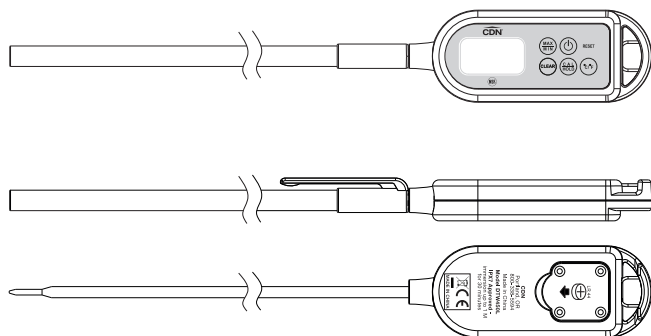

Note: Remove label from display before initial use.

Pro
Accurate[®]  
Quick-Read[®]

Note: In the following instructions, names of the control buttons are shown in CAPS. Function information that appears on the display is shown in **BOLD CAPS**.

BATTERY INSTALLATION

The battery is installed. Replace battery when LCD becomes dim.

1. Remove battery cover on the back with a small Phillips screwdriver.
2. Install one LR44 battery with positive (+) side up.
3. Replace the battery cover.

OPERATING INSTRUCTIONS

A. Temperature Measurement

1. Press the POWER button to turn the DTW450L on.
2. After use, press the POWER button to turn the DTW450L off and conserve battery life.

B. Temperature Scale

Press the °C/°F button to select temperature reading in Fahrenheit or Celsius.

C. Heat Shield

Insert the stem through the hole in the heat shield (open side up), and slide it up to the bottom of the display.

CAUTION: Initial positioning of the heat shield may require more force. Be careful of the pointed tip.



D. Hold

Before withdrawing the DTW450L from the food, press the HOLD button. This will “hold” the reading until pressed again. **H** appears in the upper right corner of the display.

E. Max/Min Mode

Max/Min Mode is always working behind the scenes, continually storing the highest and lowest temperatures.

1. **Before using Max/Min Mode clear the stored MAX/MIN values by pressing the CLEAR button while in the Max or Min mode.**
2. Press the MAX/MIN button to display



the highest temperature. **MAX** appears on the display.

- Press the MAX/MIN button twice to display the lowest temperature. **MIN** appears on the display.
- The display automatically returns to the temperature mode after a few seconds.
- Press the CLEAR button in Max or Min mode to clear the respective stored MAX/MIN value.

F. Field Calibration

- Fill a 1 cup measuring container with a slurry of ice water using 3 parts crushed ice to 1 part water.
- Allow to stand for 3-5 minutes.
- Immerse the stem into the middle of the slurry. **Do not let the stem touch the bottom of container.**
- Press the CAL button for 2 seconds. The display will be blank for 2 seconds.
- Release the CAL button and **32.0°F/0°C** appears.


Note: To avoid accidental recalibration, this function only works when the water temperature is 30 to 34°F/-1 to +1°C.

Err will appear for 2 seconds if the water is not within this range and then return to the temperature display mode.

G. Adjustable Stainless Steel Clip

CAUTION: Always position the DTW450L on the pot before filling it and/or applying heat.

Insert the stem through both holes in the adjustable stainless steel clip. Press the top portion of the clip together for easier sliding up the thermometer stem. Push the clip down onto the side of the pot and position it until the stem tip is just above the bottom of the pot.

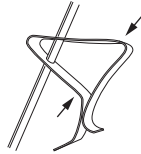

Important: KEEP STEM AWAY FROM DIRECT HEAT OF THE COOKTOP BURNER.

Important: DO NOT LEAVE IN HOT OVEN OR MICROWAVE.

Note: Clean the thermometer stem before each use.

Note: For use in commercial dishwashers only.

Note for Induction Cooktops: Sometimes, the induction cooktop magnetic field may interfere with digital thermometers. If there is interference, briefly turn off the induction cooktop to get a digital thermometer reading or use a dial thermometer.

Tip: Meat should be allowed to “rest” for 10 to 15 minutes after it is removed from oven. This allows time for the meat’s internal temperature to stabilize and the juices to redistribute. This will result in a roast that is both juicier and easier to carve.

CAUTION: Avoid keeping the thermometer too close to objects that continuously generate high heat for long periods (i.e., hot plate). This can cause the thermometer to overheat.

CE Note: This device could be sensitive to electrostatic discharge. If electrostatic discharge or malfunctioning occurs, please re-install the battery to reset this unit.

CANDY TEMPERATURE GUIDE

Jelly	220°F	104°C
Thread	230–234°F	110–112°C
Soft Ball	234–240°F	112–115°C
Firm Ball	244–248°F	118–120°C
Hard Ball	250–266°F	121–130°C
Soft Crack	270–290°F	132–143°C
Hard Crack	300–310°F	149–154°C
Caramelize	316–338°F	158–170°C

HIGH ALTITUDE ADJUSTMENT FOR CANDY-MAKING

STAGE	2,000 feet	5,000 feet	7,500 feet
Soft Ball	230–236°F	224–230°F	219–225°F
Firm Ball	238–244°F	232–238°F	227–233°F
Hard Ball	246–264°F	240–258°F	235–253°F
Soft Crack	266–286°F	260–286°F	255–275°F
Hard Crack	296–306°F	290–300°F	285–295°F

OIL TEMPERATURE GUIDE

325–375°F/163–190°C is the normal desired temperature for deep fry cooking.

Note: When food is added to hot oil, the temperature of the oil immediately drops at least 50°F/28°C. You will need to bring the oil temperature back to the desired cooking temperature. Frying at lower temperatures results in lighter color, less flavor development and increased oil absorption.

DEEP FRY TEMPERATURE GUIDE

Deep Fry Lo	325–340°F	163–170°C
Deep Fry Hi	340–365°F	170–185°C
Shrimp	350°F	177°C
Chicken	355°F	180°C
Onions	370°F	188°C
Fish	375°F	191°C
Doughnuts/Fritters	375°F	191°C
French Fries	380°F	193°C

USDA SAFE FOOD TEMPERATURES

* Beef, Veal, Lamb – well	160°F	71°C
* Beef, Veal, Lamb – medium	145°F	63°C
* Beef, Veal, Lamb – rare	140°F	60°C
Poultry	165°F	74°C
* Pork/Ham – pre-cooked	145°F	63°C
Ground Meat	160°F	71°C
* 3 minutes rest time		

CARE OF YOUR PRODUCT

- Wipe display clean with a damp cloth.
- Clean stem, shield and clip with soap and water.
- Store the thermometer at room temperature between -4 to +149°F/-20 to +65°C.

PRECAUTIONS

- Always wear a heat resistant glove to touch the stainless steel stem during or just after cooking.
Do not touch with bare hands.
- Keep the battery and thermometer away from children.
- Clean the stem and dry thoroughly after use.
- Do not clean the unit with abrasive or corrosive compound, which may scratch the plastic and corrode the electronic circuits.
- Do not subject the unit to excessive force shock, dust, temperature or humidity, which may result in malfunction, shorter electronic life span, damaged battery and distorted parts.
- Do not tamper with the unit's internal components. Doing so will invalidate the warranty on the unit and may cause unnecessary battery damage and distorted parts.
- Do not subject the unit to excessive exposure to direct sunlight.
- To avoid deformation, do not place the unit in extreme temperatures. Never burn the stem directly over the fire. Do not use the probe when the temperature is above 450°F/230°C. Doing so will deteriorate the wire.
- Do not use the thermometer in a microwave oven.
- Always read the user manual thoroughly before operating.

SPECIFICATIONS

- Temperature Alert:** -40 to +450°F/-40 to +230°C;
°F/°C selectable
- Power:** One LR44 alkaline battery



Antimicrobial properties are built-in to inhibit the growth of bacteria that may affect this product. According to EPA guidelines we cannot claim that the antimicrobial properties in this product protect users or others against bacteria, viruses, germs, or other disease organisms.

This product does not protect users or others against food-borne bacteria. Always clean and wash this product thoroughly before and after each use.

The information in this document has been reviewed and is believed to be accurate. However, neither the manufacturer nor its affiliates assume any responsibility for inaccuracies, errors or omissions that may be contained herein. In no event will the manufacturer or its affiliates be liable for direct, indirect, special, incidental or consequential damages arisen by using this product or resulting from any defect/omission in this document, even if advised of the possibility of such damages. The manufacturer and its affiliates reserve the right to make improvements or changes to this document and the products and services described at any time, without notice or obligation.



5-Year Limited Warranty: Any instrument that proves to be defective in material or workmanship (excluding batteries) within five years of original purchase will be repaired or replaced without charge upon receipt of the unit prepaid at: CDN, PO Box 10947, Portland, OR 97296-0947 USA. This warranty does not cover damage in shipment or failure caused by failure to adhere to the accompanying instructions, inadequate maintenance, normal wear and tear, tampering, accident, misuse, unauthorized modification, obvious carelessness or abuse. CDN shall not be liable for any consequential or incidental damages whatsoever.

For more detailed information on our products, please visit CDNmeasurement.com or call 800-338-5594.

