



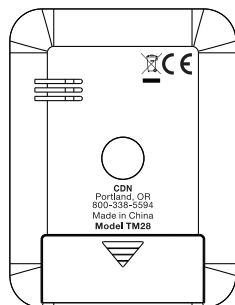

Kitchen Measurement Tools

MINI TIMER

Counts 100 minutes by minutes & seconds

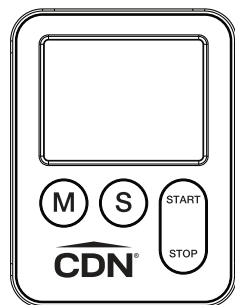

Note: In the following instructions, names of the control buttons are shown in CAPS. Function information that appears on the display is shown in **BOLD CAPS**.

BATTERY INSTALLATION

Battery is installed. Remove plastic tab to allow power. Replace battery when LCD becomes dim or alarm level declines.

1. Remove battery cover on the back by sliding it in the direction of the arrow.
2. Install two 1.5V LR44 button batteries, positive (+) side up.
3. Replace the battery cover until it clicks shut.

OPERATING INSTRUCTIONS

A. Count Down

1. Press the M and/or S buttons to enter the desired time. Press and hold for fast advance.
2. Press the START/STOP button to start counting down. **M** and **S** flash on the display.
3. Press the START/STOP button to interrupt the count. Press START/STOP again to resume the count.
4. The alarm sounds when the count reaches **00:00**.

5. The alarm stops automatically after 60 seconds or press START/STOP to stop the alarm. The last count is recalled.
6. When timer is stopped, press both M and S buttons simultaneously to reset to **00:00**.

B. Count Up

1. When timer is stopped, press both M and S buttons simultaneously to reset to **00:00**.
2. Press the START/STOP button to begin the count up to a maximum of 99 minutes and 59 seconds. **M** and **S** flash on the display.
3. Press the START/STOP button to interrupt the count. Press START/STOP again to resume the count.
4. When timer is stopped, press both M and S buttons simultaneously to reset to **00:00**.

CARE OF YOUR PRODUCT

- Avoid exposing your timer to extreme temperatures, water or severe shock.
- Avoid contact with any corrosive materials such as perfume, alcohol or cleaning agents.
- Wipe clean with a damp cloth.

Note: Remove label from display before initial use.

The information in this document has been reviewed and is believed to be accurate. However, neither the manufacturer nor its affiliates assume any responsibility for inaccuracies, errors or omissions that may be contained herein. In no event will the manufacturer or its affiliates be liable for direct, indirect, special, incidental or consequential damages arisen by using this product or resulting from any defect/omission in this document, even if advised of the possibility of such damages. The manufacturer and its affiliates reserve the right to make improvements or changes to this document and the products and services described at any time, without notice or obligation.



5-Year Limited Warranty: Any instrument that proves to be defective in material or workmanship (excluding batteries) within five years of original purchase will be repaired or replaced without charge upon receipt of the unit prepaid at: CDN, PO Box 10947, Portland, OR 97296-0947 USA. This warranty does not cover damage in shipment or failure caused by failure to adhere to the accompanying instructions, inadequate maintenance, normal wear and tear, tampering, accident, misuse, unauthorized modification, obvious carelessness or abuse. CDN shall not be liable for any consequential or incidental damages whatsoever.

For more detailed information on our products, please visit CDNkitchen.com or call 800-338-5594.

